


# Digital Scale for kitchen use

MODEL KD-160

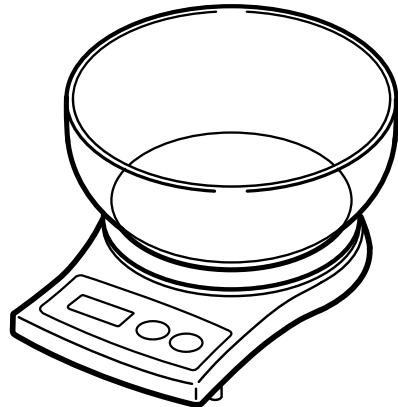

GB USA

## Instruction manual

D

F

E

I

NL

P

C



**Bedienungsanleitung**  
**Mode d'emploi**  
**Manual de instrucciones**  
**Manuale d'istruzione**  
**Gebruiksaanwijzing**  
**Manual de instruções**  
**電子秤使用手冊**

**Notice**

1. Do not dismantle the unit.
2. Avoid using chemicals to prevent creating a hazard.
3. Use the unit on a firm, flat surface.

**Name of parts**

A	Tray
B	LCD Display
C	ON/TARE button
D	OFF button
E	Battery compartment

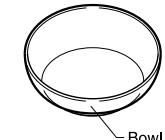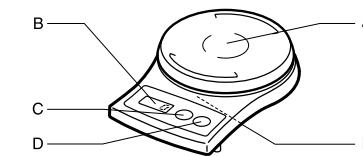

**How to use**

1. Open the battery compartment cover (see figure 1) and insert 4×"R03 (IEC)" or "24F" batteries as indicated.  
NB. Make sure that the polarity of each battery is correctly aligned.

2. Press the ON/TARE button.

The display will show "8888".


Wait until the display shows "0" before proceeding to weigh item(s).

NB. Make sure you place item(s) in the centre of the tray.

If the weight of the item(s) exceeds the scale's capacity, "EEEE" will appear on the display.

8888 → 0g  
g version

8888 → 0.00oz  
g/oz version

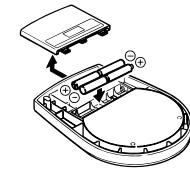

3. Tare weighing function

The tare function allows you to Add and Weigh individual item(s) without removing contents of the bowl. When the display shows "0", put the bowl onto the scale and press the ON/TARE button. The display will revert to "0" again. Now add and weigh item(s), pressing the ON/TARE button before adding and weighing each individual item. After removing the bowl at the end, the display will show a negative reading. Press the ON/TARE button to return the display to "0".

4. Press the OFF button to turn off the power.

5. Auto Power Off

The scale is designed with an auto power-off function for energy efficiency. If the same reading is displayed for more than 5 minutes the scale will automatically turn off.

6. Battery Replacement

If "Lo" appears in the display when attempting to weigh, replace the batteries (following previous instructions.)

7. Mode Change

When a mode change is required, press ON/TARE and OFF buttons simultaneously, and then select the proper mode. (for the g/oz version)

**Care instructions and important notes**

1. The scale is a precision instrument. Do not dismantle the scale and avoid strong vibrations or shocks.
2. Keep away from direct sunlight and heating appliances, eg. oven.
3. When moving the scale to a new location, where the temperature differs from the previous location by more than 10°C (50°F), leave the scale in the new location for at least 2 hours before using it.
4. Wipe the scale clean with a damp cloth.
5. If the scale is not to be used for a long period of time, remove the batteries.

**Specification**

Model KD-160	without bowl	200	210
	with bowl	201	211
Capacity		2kg	2kg / 70oz
Minimum graduation		1g	1g/0.05oz
Power		4×"R03 (IEC)" or "24F" batteries (included)	